



IP Phone 1140E User Guide

BCM

Business Communications Manager

Document Status: **Standard**

Document Version: **03.01**

Document Number: **NN40050-105**

Date: **November 2006**

Copyright © Nortel Networks Limited 2006, All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks.

Trademarks

Nortel, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

Microsoft, MS, MS-DOS, Windows, and Windows NT are registered trademarks of Microsoft Corporation.

All other trademarks and registered trademarks are the property of their respective owners.

Contents

Chapter 1	
About the Nortel IP Phone 1140E	5
Basic Features	5
Telephone Controls	7
Telephone Display	11
Chapter 2	
Entering and editing text	13
Entering text using the telephone dialpad	13
Entering text using the USB keyboard	13
Chapter 3	
Configuring options	15
1. Preferences	15
1. Display Settings	15
2. Language	15
3. Bluetooth Setup	16
2. Local Diagnostics	20
1. IP Set&DHCP Information	20
2. Network Diagnostic Tools	21
3. Ethernet statistics	21
4. IP networks statistics	21
5. USB device information	21
3. Network Configuration	21
4. Lock Menu	21
Chapter 4	
Telephone setup	23
Language choice	23
Ring Type	23
Call log	23
Time offset	23
About your programmable buttons	24
Memory buttons	24
Program memory buttons	24
Making a call	25
Answering a call	26
While on an active call	26
Placing a call on hold	26

4 Contents

Using handsfree	26
Using a headset	26
Muting the Microphone	27
Accessing External Server Applications	27

Chapter 1

About the Nortel IP Phone 1140E

The Nortel IP Phone 1140E brings voice and data to the desktop by connecting directly to a Local Area Network (LAN) through an Ethernet connection.



Note: In this guide, user-defined feature key labels appear beside the keys, and soft key labels appear directly above the keys.

Basic Features

Your IP Phone 1140E supports the following:

- six user-defined feature keys with labels and indicators
- four soft keys



Note: Some IP Phone 1140E phones are not configured to support soft key functionality. Consult your system administrator.

- graphical, high-resolution LCD display, backlit, with adjustable contrast
- high-quality speaker phone
- volume control keys for adjusting ringer, speaker, handset, and headset volume
- six specialized feature keys:
 - Quit
 - Directory
 - Message/Inbox
 - Shift/Outbox
 - Services
 - Copy
- six call-processing fixed keys:
 - Mute
 - Handsfree
 - Goodbye
 - Expand to PC
 - Headset
 - Hold
- gigabit Ethernet ports
- built-in gigabit Ethernet switch for shared PC access
- headset jack with an On/Off key

- USB port to support a keyboard or mouse



Note: Powered downstream 1.1-compliant USB hubs are supported, including USB 2.0 hubs, if they offer USB 1.1 backwards compliancy.

- automatic network configuration
- hearing-aid compatibility
- wireless headset support using a Bluetooth® 1.2 compliant Audio Gateway (Headset Profile, Bluetooth Power Class 2)



Caution: Do not plug the IP Phone 1140E into a regular telephone jack. This results in severe damage to the IP Phone. Consult your system administrator to ensure that you plug your telephone into a 10/100/1000BaseT Ethernet jack



Caution: The IP Phone 1140E is designed for use in an indoor environment only.

Figure 1 shows the IP Phone 1140E.

Figure 1 IP Phone 1140E



*Note: If supported by your server, the Feature Status Lamp provides a user-defined alert. Contact your system administrator to find out if this feature is available for you.

Telephone Controls



Note: Some IP Phone 1140E phones are equipped with optional key caps. Text in parentheses indicates labels appearing on the key caps, for example, (Services).



Fwd

Soft keys are located below the display area. The LCD label above each key changes based on the active feature.



Feature

The **Feature key** is located on the bottom left of the display area and is used for accessing different phone options such as changing the ring type (Feature *6)



The keys on either side of the display area are **user-defined feature keys**, with labels on the LCD display.



A steady LCD light beside a line (DN) key indicates that the line is active. A flashing LCD light indicates the line is on hold or the feature is being programmed.



A steady LCD light beside a feature key indicates that the feature is active. A flashing LCD light indicates that the feature is being programmed.



Use the **Volume control** buttons to adjust the volume of the ringer, handset, headset, speaker, and the Handsfree feature. Press the top button to increase the volume, and press the bottom button to decrease volume.



Press the **Mute** key to listen to the receiving party without transmitting. Press the **Mute** key again to return to two-way conversation. The **Mute** key applies to handsfree, handset, and headset microphones.

Note: The Mute LED indicator, located on the **Mute** key, flashes to indicate that the microphone is muted.



Press the **Handsfree** key to activate handsfree.

Note: The Handsfree LED indicator, located on the **Handsfree** key, lights to indicate when handsfree is active.



Use the **Navigation** keys to scroll through menus and lists appearing on the LCD display screen. The outer part of this key cluster rocks for up, down, left, and right movements.



Use the **Send/Enter** key, at the center of the Navigation key cluster, to confirm menu selections.

In most menus, you can use the **Send/Enter** key instead of the **Select** soft key.



(Hold)

Press the **Hold** key to put an active call on hold. Tap the flashing line (DN) soft key to return to the caller on hold.



(Expand)

Use the **Expand to PC** key to access external server applications.



(Headset)

Press the **Headset** key to answer a call using the headset or to switch a call from the handset or handsfree to the headset.

Note: The Headset LED indicator, located on the **Handsfree** key, lights to indicate that the headset is in use.



(Headset)

Press the **Headset** key twice to open the Bluetooth Setup menu.

Note: If Bluetooth wireless technology is not enabled on your phone, this menu is not available.



(Headset)



(Goodbye)

Use the **Goodbye** key to terminate an active call.



When a message is waiting, the red **Visual Alerter/Message Waiting** indicator flashes. Also, when the ringer sounds, this indicator flashes.



When your IP Phone 1140E firmware is being updated, the blue **Feature Status Lamp** indicator flashes.

Note: To find out if additional features are supported, contact your administrator.



Press the **Copy** Key to copy entries to your Personal Directory from other lists, such as the Caller List, Redial List, and Corporate Directory.



Press the **Services** key to access the scrollable Feature Display menu (FEATURE *900), including the hot desking feature (programmable memory button).



Double-press the **Services** key to access the Local Tools menu, and use the navigation keys to access the following items:



- 1. Preferences
- 2. Local Diagnostics
- 3. Network Configuration
- 4. Lock Menu

Note: Your system administrator can establish a password for the Tools menu. If you attempt to access the Tools menu and a dialog box appears prompting you for a password, contact your system administrator.



Press the **Quit/Stop** key to close an active menu or dialog box. Pressing the **Quit/Stop** key does not affect the status of active calls.



Press the **Express messaging** key (FEATURE 980; programmable memory button) to send voice mail messages. For more information about voice mail messaging, refer to your *CallPilot Quick Reference Card*.



Press the **Mailbox in** key (programmable memory button) to open your CallPilot mailbox. For more information about mailbox options, refer to your *CallPilot Quick Reference Card*.



Programmable memory button
(Default: Blank)


Telephone Display

Your IP Phone 1140E has three display areas:

- The upper display area provides labels for the four user-defined feature keys.
- The middle display area contains single-line information for items such as caller number, caller name, feature prompt string, user-entered digits, date and time information, and telephone information.
- The lower display area provides labels for the four soft keys.

Figure 2 shows an idle LCD screen.

Figure 2 IP Phone 1140E LCD screen

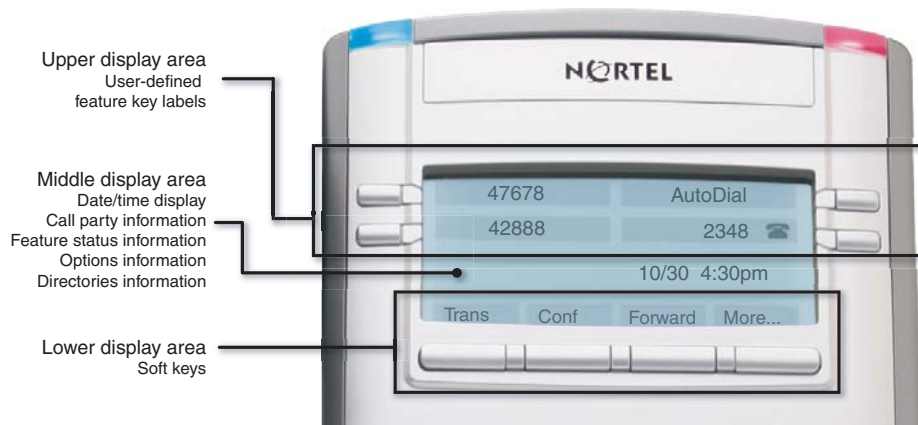

Chapter 2

Entering and editing text

You can enter and edit text on your IP Phone 1140E using the following methods.

Which method you use for text entry or editing depends on the application. [Table 1](#) shows the applications and input devices that you can use for text entry.

Table 1 Application text entry

For:	Use:
Call Server-related applications (for example, changing feature key labels or dialing)	Dialpad USB keyboard for numeric entries only
Graphical applications	USB keyboard
Local Tools menu	USB keyboard Dialpad for numeric entries

Entering text using the telephone dialpad

You can use the dialpad to enter text. For example, if you want to enter the letter A, press the number 2 key once. If you want to enter the letter C, press the number 2 key three times.



Note: No letters are associated with the number 1 or 0 keys.

Entering text using the USB keyboard

You can use the USB keyboard, when connected, to enter text in the tools and graphical applications.

For number entry in telephone applications (for example, when dialing), you can use the keyboard to enter digits (0–9), as well as asterisk (*) and number sign (#). Other characters are not used.

When on a call, you can use the function keys (f1, f2, f3, f4, f5, f6, f7, and f8) to control the telephone. [Table 2](#) shows the function keys and their associated action during telephone calls.

Table 2 USB keyboard function keys during telephone calls

Function Key	Action
f1	Go to Handsfree mode
f2	Go to Headset mode
f3	Place the current call on hold
f4	Mute the current call
f5	Volume up

f6	Volume down
f7	Copy
f8	Quit

Chapter 3


Configuring options



Note: Many of the options discussed in this section are for administrator use only. Do not make any changes unless instructed by an administrator.

Your IP Phone 1140E has both local and server-based options. Two methods are available to navigate in the Local Tools menu:

- Follow the prompts on screen.
- Where a menu entry has a number in front of it, you can select that entry by pressing the associated key on the dialpad. For example, when you are in the Local Tools menu, you can access 2. Local Diagnostics by pressing the 2 key on the dialpad.


Double-press the  (Services) key to open the Local Tools Menu and access the following options:

1. Preferences

Use the Preferences menu item to configure local preferences.


1. Display Settings

Use the Contrast tool to alter the physical settings of the display. Use the Sleep tool to control how long the display remains lit if the phone is inactive.

- 1 Double-press  (Services) to open the Local Tools menu.
- 2 Press the 1 key on the telephone dialpad to open the 1. Preferences menu, and press the 1 key on the telephone dialpad to open the 1. Display Settings menu.
- 3 Press the **Up/Down** navigation keys to scroll and select either Contrast or Sleep. Press the **Select** soft key.
- 4 Press the **Up/Down** navigation keys to increase or decrease the value.
- 5 Press the **Exit** soft key.

2. Language

Use the Language tool to select the language used on your phone.

- 1 Double-press  (Services) to open the Local Tools menu.
- 2 Press the 1 key on the telephone dialpad to open the 1. Preferences menu, and press the 2 key on the telephone dialpad to open the 2. Language menu.

- 3 Press the **Up/Down** navigation keys to scroll and highlight the desired language (for example, German [Deutsche]).
- 4 Choose one of the following:
 - Press the **Select** soft key to save the desired language and return to the Telephone Options menu.
 - Press the **Cancel** soft key to keep existing configurations.
- 5 Press the **Exit** soft key. Changes are saved automatically.

3. Bluetooth Setup

Your IP Phone 1140E is equipped with a Bluetooth wireless technology radio system to support wireless headsets.

You can access the Bluetooth Setup options using either of the following two methods:

- Double-press the **Headset** key to open the Bluetooth Setup dialog box. This method is used in this document.
- Double-press the **Services** key to open the Local Tools menu, press 1 on the dialpad to select 1. Preferences, and press 3 on the dialpad to open the 3. Bluetooth Setup dialog box.




Note: The Bluetooth Setup menu entry is not available on all phones. If the Bluetooth Setup menu entry appears dimmed, or fails to open when you double press the Headset key, the feature is not enabled on your phone. Before you can use a wireless headset with your phone, the feature must be enabled by the system administrator.

Contact your administrator to find out if Bluetooth wireless technology functionality is available for your use.



Note: If Bluetooth wireless technology is enabled on your phone, and password-protection for the Local Tools menu has been enabled, you can still double-press the Headset key to access the Bluetooth Setup menu.

To pair the wireless headset with your phone:

- 1 Check with your administrator to ensure that Bluetooth wireless technology is available for your use.
- 2 Double-press the  (Headset) key access 3. Bluetooth setup. The Enable Bluetooth check box is highlighted.



Note: If the Bluetooth Setup menu fails to open when you double press the Headset key, Bluetooth wireless technology is not enabled on your phone.

- 3** Press the **Enter** key to activate Bluetooth wireless technology. A check mark is displayed to indicate that the feature is activated. The message “BT Enabled” appears at the bottom of the display.
- 4** Put your wireless headset in its pairing or search mode. The procedure for doing this can be different for each wireless headset. Refer to the documentation that accompanied your headset, or contact the vendor.

For example, if you are using the GN Netcom GN 6210, do the following:

- a** Turn the headset off by pressing and holding the **telephone** button for 3 - 4 seconds until a high to low tone is heard. The headset blue LED turns off.
 - b** Press and hold the **telephone** button for about 8 seconds until the blue LED flashes and then lights steadily.
- 5** Search for (pair) the headset:
- a** Press the Right navigation key twice to highlight the Search button, displayed next to the Search Devices item.
 - b** Press the **Enter** key.
The message “Searching....” is displayed.
 - c** If the search is successful, a list of Bluetooth wireless devices appears in the Found: combo box.
 - d** Choose one of the following:
 - If the search is successful, proceed to step 6.
 - If the search is not successful, the message "Search completed. No device found" is displayed. Power off the wireless headset, and repeat steps 4 and 5.
- 6** When your headset is displayed in the Found: combo box, press the **Stop** soft key or wait for the search to finish.
- 7** Choose one of the following:
- If your headset is displayed in the Found: combo box, proceed to step 8.
 - If your headset is not displayed in the Found: combo box, select your headset from the list, as follows:
 - a** Press the **Right** navigation key to navigate to the Found: combo box. Press the **Enter** key to start the edit mode.
 - b** Press the **Down** navigation key to open the list. Press the **Up/Down** navigation keys to scroll and highlight your headset.
 - c** Press the **Enter** key to select the headset and close the list. Press the **Enter** key to exit edit mode.

- 8 Press the **Right** navigation key to scroll in the list and highlight the **Pair** button (next to the **Pair Device** item) and press the **Enter** key.
 - a A dialog box appears that prompts you to "Enter PIN#".
 - b Use the telephone dialpad to enter the headset PIN and press the **Enter** key.



Note: Check your headset's documentation to find its PIN (sometimes called a passkey). Typically this value is 0000.

- 9 Choose one of the following:
 - If the headset is successfully paired with your phone, proceed to step 10. To verify that the pairing was successful, ensure that the headset appears in the list next to the **Paired:** item. If pairing is successful, the message "Pair completed" is also displayed at the bottom of the screen.
 - If the headset is not successfully paired with your phone, an error message is displayed at the bottom of the screen. If you get an error message:
 - Confirm that the wireless headset is still in search/pair mode. For example, on the GN Netcom GN 6210 headset the blue LED should still be lighted when the pairing operation starts.
 - If the headset timed out and exited search/pairing mode, put the headset in pairing mode, as discussed in step 4, and repeat step 8.
 - Check that you are using the correct PIN and repeat step 8.
- 10 Choose one of the following:
 - If your headset is displayed in the **Paired:** combo box, proceed to step 11.
 - If more than one device is paired, you may need to navigate to the one you want, as follows:
 - a Press the **Right** navigation key to scroll in the list and highlight the **Paired:** combo box. Press the **Enter** key to start the edit mode.
 - b Press the **Up/Down** navigation keys to open the list. Press the **Up/Down** navigation key to scroll in the list and highlight your headset.
 - c Press the **Enter** key to select the headset and close the list. Press the **Enter** key to exit edit mode.
- 11 Choose one of the following:
 - If only one headset is paired, proceed to step 12.
 - If more than one Bluetooth wireless headset is paired, the first headset paired is automatically made the active device. To make a different headset active, do the following:
 - Press the **Right** navigation key to scroll in the list and highlight the **Set** button (next to the **Set Active Device** item).
 - Press the **Enter** soft key.

The message "Set active: "device name"" is displayed. This means that the headset named is now the active wireless headset and is used when you press the headset key.

- 12 Press the Exit soft key to close the Bluetooth Setup menu and return to the main display. Changes are saved automatically.



Note: Nortel recommends that you not pair more than one headset of the same model, because they have identical names in the Paired list.

Dual Pairing Headsets

Take special care when using a "dual pairing" type of Bluetooth wireless technology headset. The GN Netcom GN6210 is an example of such a headset. It can be paired to its base as well as to the 1140E. If it is paired to both, the 1140E is the second device, and the following applies:

Press the headset "telephone" key:

- If a single tone sounds, the headset is connected to the base.
- If a double beep sounds, the headset is connected to the 1140E.

If the base is powered off, the headset is only paired to the 1140E and pressing the "telephone" key connects you to the 1140E.



Note: Unless you need to dual pair the GN6210 headset, operating the headset with the 1140E is simpler if it is only used with its charging-only base. The desktop telephone base should be powered off if it is not in use.

Interaction with wired headsets

If you connect a Bluetooth wireless technology headset and a wired headset to the same IP Phone 1140E, the two interact as follows:

- If no wireless headset is paired, the wired headset works as normal. Likewise, if a wireless headset is paired with the set, but is not in range, the wired headset works as normal.
- If the Use BT headset check box is selected, the wireless headset is used as the phone headset.
 - The Bluetooth wireless technology headset can work only if it is within range of the phone; as the wireless headset approaches the edge of its radio range, the audio quality degrades and radio interference noise increases. When the wireless headset is in connecting range, the Headset key controls the wireless headset, even if a wired headset is attached. If a wireless headset moves out of connecting range, a special beep sounds in the headset indicating the connection was lost. For example, on the GN6210, this is a series of tones, high to low, the same as the beeps that sound when a call ends.


When you do not want to use Bluetooth wireless technology

If a wireless headset is connected, and you want to use the wired headset, you can switch between the two. It is not necessary to unpair or disable the Bluetooth wireless technology feature.




Note: You can switch between a wired and wireless headset and back again either when the phone is idle or during an active call.

To switch between a wired headset and wireless headset:

- 1 Double-press the  (Headset) key to open the 3. Bluetooth Setup dialog box.
- 2 Press the **Left/Right** navigation key to select the Use BT Headset item.
- 3 Press the **Enter** key to toggle this option on or off.
A check mark indicates that the wireless headset is used. Clear the check mark to use a wired headset. On (✓) by default.

To unpair a Bluetooth wireless technology headset:

- 1 Double-press the  (Headset) key to open the 3. Bluetooth Setup dialog box.
- 2 Press the **Right** navigation key to select the Paired: item.
- 3 Choose one of the following:
 - If your headset is displayed in the Paired combo box, proceed to step 5.
 - If more than one device is paired, and your headset is not already displayed in the Paired combo box, do the following:
 - a Press the Right navigation key to select the Paired: combo box. Press the **Enter** key to open edit mode.
 - b Press the **Up/Down** navigation keys to open the list. Press the **Up/Down** navigations key to scroll in the list and highlight your headset.
 - c Press the **Enter** key to select the headset and close the combo box. Press the **Enter** key to exit edit mode.
- 4 Press the **Right** navigation key to select the UnPair button (next to the UnPair Device item).
- 5 Press the **Enter** key.

Your wireless headset is unpaired and removed from the Paired: item's list.



Note: Your wireless headset is no longer paired with your phone, and the wired headset can be used. To use the wireless headset again, you must perform the pairing and activation procedure.

2. Local Diagnostics

1. IP Set&DHCP Information

The Network Configuration tool is used to view reports about IP set and DHCP operation. This tool is for administrator use only.

2. Network Diagnostic Tools

The Network Diagnostic Tools menu contains tools that are used to diagnose network problems. This menu is for administrator use only.

3. Ethernet statistics


The Ethernet statistics tool is used to view reports about Ethernet operation. This menu is for administrator use only.

4. IP networks statistics

The IP networks statistics tool is used to view reports about network operation. This menu is for administrator use only.

5. USB device information

The USB Devices tool provides information about any Universal Serial Bus (USB) devices that you connect to your phone. Your IP Phone 1140E automatically detects USB devices when you connect them to the USB port in the back of the telephone.

- 1 Double-press  (Services) to open the Local Tools menu.
- 2 Press the 5 key on the telephone dialpad to select 5. USB Devices. USB Device information is displayed.
- 3 Press the **Return** soft key.

3. Network Configuration

The Network Configuration tool displays information that was configured when the telephone was installed. This tool is for administrator use only.

4. Lock Menu

The lock menu tool is used by the system administrator to protect the Local Tools menu items from accidental or unwanted changes.

The lock menu tool is not available on all systems. If the menu entry appears dimmed, it is not enabled on your phone. Contact your administrator to find out if this feature is available for your use.

Chapter 4

Telephone setup



Note: For more information about the features available to your telephone and how to use them, refer to the *Telephone Features User Guide*

Language choice

Select the Primary Language for the telephone display.

Choose one of the following three options:

- Press Feature *501. Select the Alternate Language for the telephone display.
- Press Feature *502. Select the Alternate Language 2 for the telephone display.
- Press Feature *503. Select the Alternate Language 3 for the telephone display.

Ring Type

To select the ring type for your telephone:

- 1 Press Feature *6.
- 2 Press 1, 2, 3, 4, or Next to hear the different ring types.
- 3 Press OK to store the ring type.

Call log

Press Feature *812 and use the navigation keys to scroll through and edit the call log.

Time offset

When your IP Phone 1140E is located in a different time zone than your system, the display shows the system time instead of the local time. The Time Offset feature allows you to adjust the time that appears on the display. Before you begin, calculate the time difference, in hours, between the server time and local time.

To change the time that appears on your telephone display to local time:

- 1 Press **Feature *510**.
- 2 Press **Change**.
- 3 Press ***** to switch between adding or subtracting time.
- 4 Using the dialpad, enter the number of hours between local time and system time.



Note: Press # to enter half-hour increments.

- 5 Press **OK**.



Note: It may take up to 1 minute for the change to appear on the display.

About your programmable buttons

Your System Administrator assigns the four programmable buttons as line, intercom, or memory buttons. The label for each button appears on the display next to the button. For more information, see your System Administrator.

Memory buttons

These are buttons that are not assigned as line or intercom buttons. Memory buttons store internal and external phone numbers or features to give you one-touch dialing or feature activation.

Program memory buttons

You can program a memory button with a new phone number or feature.

External autodial

- 1 Press **Feature *1**.
- 2 Press a memory button.
- 3 Dial the external phone number.
- 4 Press **OK** to store the phone number.

Internal autodial

- 1 Press Feature *2.
- 2 Press a memory button.
- 3 Dial the extension number.
- 4 Press OK to store the extension number.

Features

- 1 Press Feature *3.
- 2 Press a memory button.
- 3 Press Feature and enter the feature code.
- 4 Press OK to store the feature code.

Erase memory buttons

- 1 Press Feature *1.
- 2 Press a memory button.
- 3 Press OK to erase the phone number saved on the button.

Making a call

There are many ways to place a call depending on your telephone programming and the type of call.

Making external calls using line soft keys

- 1 Lift the handset.
- 2 Tap a line soft key.
- 3 Dial the external telephone number.

Making external calls using intercom soft keys

- 1 Lift the handset.
- 2 Tap an intercom soft key, and enter a line pool access code.
- 3 When you hear an external dial tone, dial the external telephone number.



Note: Contact your system administrator for a list of line pool codes. When entering a line pool access code on PRI lines, you do not hear a dial tone.

Making internal calls using intercom soft keys

- 1 Lift the handset.
- 2 Tap an intercom soft key.
- 3 Dial the extension number.


Contact your system administrator for a list of extension numbers.

Answering a call

When your telephone rings and the light flashes, or when an intercom or line soft key indicator flashes:

- Lift the handset.




OR

- Press the line or intercom soft key with the flashing  indicator before you lift the handset.

While on an active call





Placing a call on hold

Calls are put on hold automatically when you switch from one line to another.

- While on a call, press  (Hold). The  indicator for the line on hold flashes.
- To retrieve a held call, tap the line soft key with the flashing  indicator.



Using handsfree




Your System Administrator must program the Handsfree feature for your telephone.

- Press  (Handsfree) to make or answer a call.
- To switch to handsfree when you are on a handset call, press  (Handsfree) and replace the handset. Lift the handset to switch back.
- To switch to handsfree when you are on a headset call, press  (Handsfree)
Press  (Headset) to switch back.


Using a headset




You must have a headset installed on your telephone to use this feature.

- Press  (Headset) to activate the headset mode. When the  (Headset) light is on, press a line or intercom soft key to make a call.

- To switch to your headset when you are on a handset call, press  (Headset) and replace the handset. Lift the handset to switch back.
- To switch to your headset when you are on a Handsfree call, press  (Headset). Press  (Handsfree) to switch back

Muting the Microphone

You can use mute() on handset, handsfree, or headset calls.

- While on a call, press  (Mute) to turn the microphone off. The  (Mute) button lights when the microphone is off.
- Press  (Mute) again to turn the microphone on.

Accessing External Server Applications

Use External Server Applications to access a variety of applications directly from your IP Phone 1140E.

To find out what features and services are available, contact your system administrator. Depending on what is available on your system, your phone can provide information; for example, local news and weather, stock market information, or traffic reports.

For more information about the External Server Applications, consult the Nortel IP Phone External Server Applications User Guide.

Index

C

Copy Key 10

copyright 2

E

Expand to PC key 9

G

Goodbye key 9

H

Handsfree / Speaker key 8

Headset key 9

Hold key 9

L

Line (DN) key 8

M

Message waiting indicator 9

Mute key 8

N

Navigation keys 8

P

Programmable line/feature keys 8

R

regulatory information 2

S

Soft keys 7

T

trademarks 2

V

Volume control 8

Volume control bar 8